

Step 1: Remove these 3 screws. Unplug the LED cable.








Step 2: Get the NEW electronic housing. Hold the housing against the back of the enclosure.







Step 3: Plug the LED cable into the electronic housing.

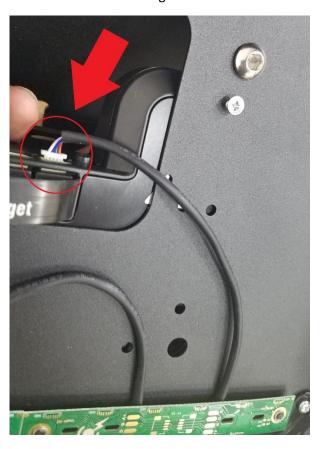



Step 4: Hold the electronic housing against the enclosure back plate so that they are flush. Align the 3 holes on the housing with the 3 holes on the enclosure.







Step 5: While holding the electronic housing against the back plate, screw in the 3 screws.

